 



# Integrated ON/OFF temperature control of water based heating coil in CDP 75 – 125 – 165 pool dehumidifiers

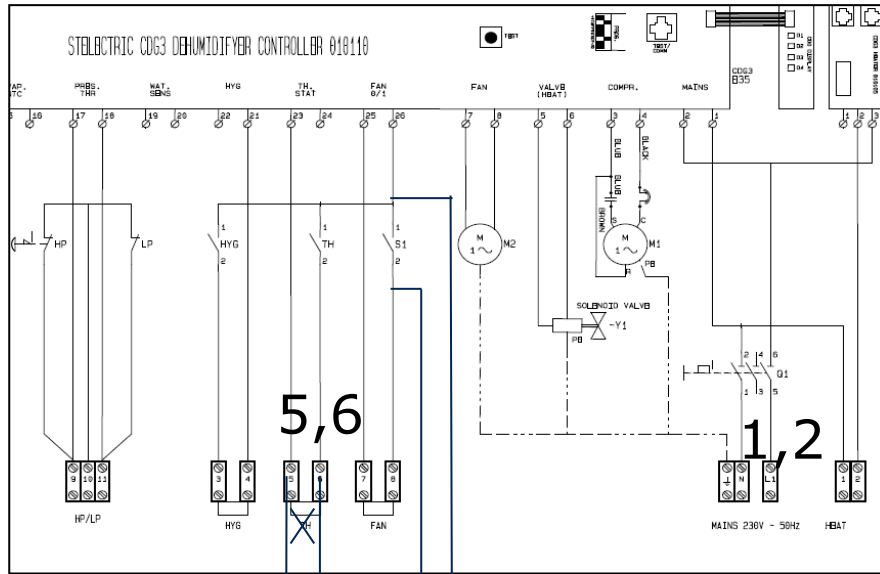

Typically a heating coil is used when additional heat supply to the room is needed.

Remove the bridge between terminal 5,6 in the PCB and connect thermostat Th as shown.

Connect solenoid valve to terminal 1,2, 230 V.

When Th is activated it will open for solenoid valve and water will flush through the heating coil and the fan will start simultaneously.

